

## **Important!!!**

### **Read Before Installing Head Gaskets**

Spray gaskets with copper coat sealant. Apply 2 light coats, covering both sides completely. Apply coats with approximately 5 minutes between coats.

Let copper coat tack up, then install gaskets.

**Re-torque heads to 100 ft-lbs after initial start up and break in.**