

Engine Mount Adaptor Kit Part# MM6

Install on 1969 or older Pontiac engine into post 1970 chassis

Hardware Includes:


- 2- Adaptor Plates
- 8- 7/16"-14 x 3/4" Grade 5 Bolts
- 8- 7/16" Lock Washers

Mount adaptors to the block using holes marked A and B as shown in the illustration below. Use the bolts supplied and torque to 60 ft. lbs.

Mount the adaptors so the smooth side is facing out (nut is toward the block) and note that there is a top to the plates. The holes are closer to the top than the bottom. Make sure you have them mounted properly.

Attach the late model motor mounts to the plate (you will only be using two of the three holes in the late style mounts) and tighten securely.

CAUTION: Use only the bolts supplied with your adaptor kit!

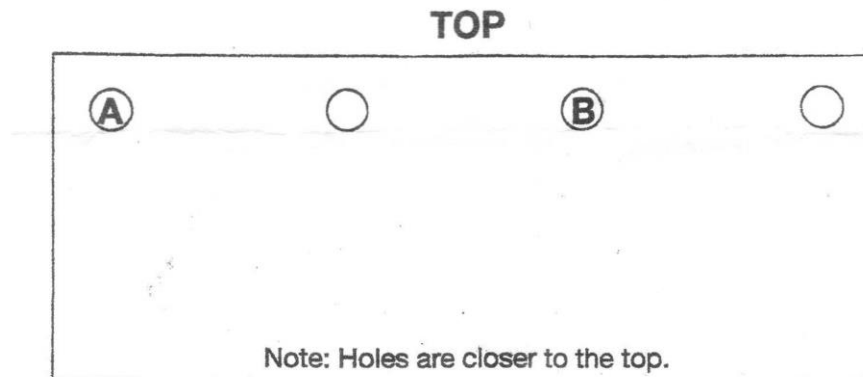

Note: It has been brought to our attention that some late 70's Pontiac blocks have a boss that interferes with the adaptor plate. If this is the case, the boss will have to be ground for clearance or drilled or tapped to 7/16" to bolt the mount directly to the block. If drilled or tapped, this side will not require an adaptor plate. **Adaptor plates must fit flat.**